



INSTRUCTIONS FOR INSTALLING EXTRA SNAPHOOK ASSEMBLIES


Your extra Internal Halyard Snaphook Assembly should look like the following:

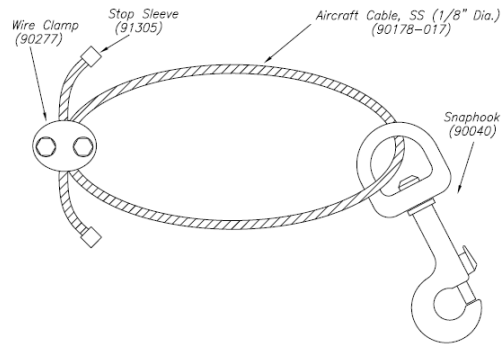

1. The way to install the extra snaphook assemblies on the flagpole halyard is by utilizing the wire clamp. The wire clamp will need to be taken apart with a set of pliers or a small wrench. It should split into the 3 separate parts shown below.

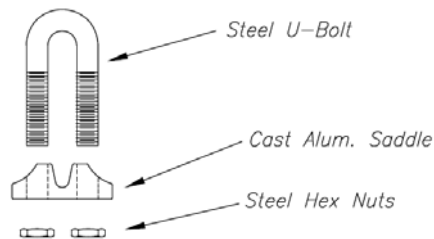

2. Once taken apart, place both the halyard on the flagpole and the aircraft loop provided with the snaphook inside of the "Steel U-Bolt." Note: If a neoprene snaphook cover is to be used, install this while cable is taken apart.
3. Place the Saddle over the U-Bolt so that it holds down the steel cable loop and flagpole halyard inside of it.
4. Tighten the Hex Nuts on the threaded section of the U-Bolt to hold the steel cable and halyard down. Your wire clamp should be assembled as follows:

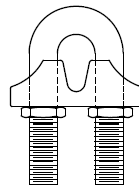

5. You should now have your snaphook assembly connected to your internal flagpole halyard. If any adjustment is needed, the wire clamp will need to be loosened in order to slide up and down the flagpole halyard.